


# INSTALLATION FOR HOME SLICKER TOP DETAIL

Run Home Slicker to within 3" of soffit overhang. Install a 1" X 3" board in space between top of Home Slicker and bottom of soffit. Install siding to within 4" of soffit overhang. Install a 1" X 4" finish trim board over the 1" X 3" board. This will allow for a "chimney effect" within the wall and allow convective drying to occur. Apply bottom detail to top edge of Home Slicker if concerned about insect infiltration.

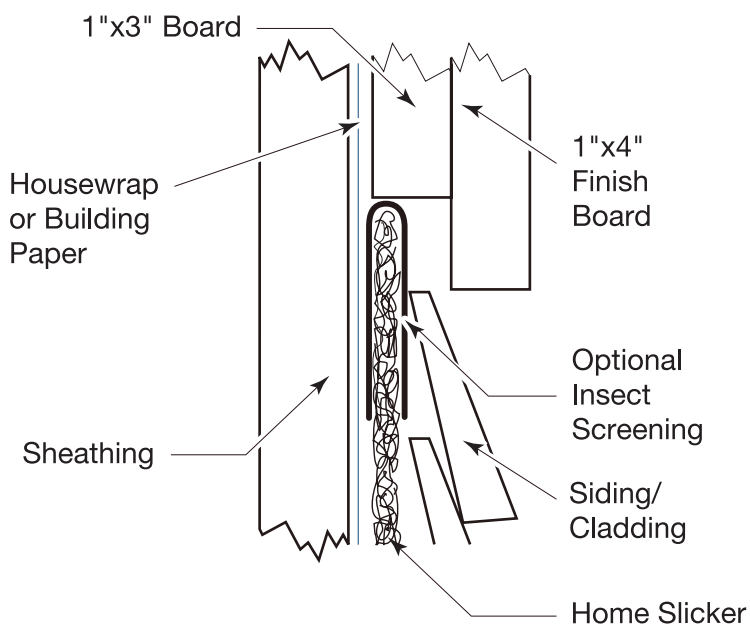

**BENJAMIN  
OBDYKE**

For additional information call:

**800-346-7655**