


# INSTALLATION FOR HOME SLICKER

## BOTTOM DETAIL

To prevent insect infiltration along bottom edge of siding, attach a 6" wide screen material (1/8" max. hole size) along the wall 3" above bottom edge of Home Slicker. Fold up onto outer surface of installed Home Slicker and fasten with a large head nail to hold in place prior to applying siding or cladding. Screen will prevent insect infiltration.

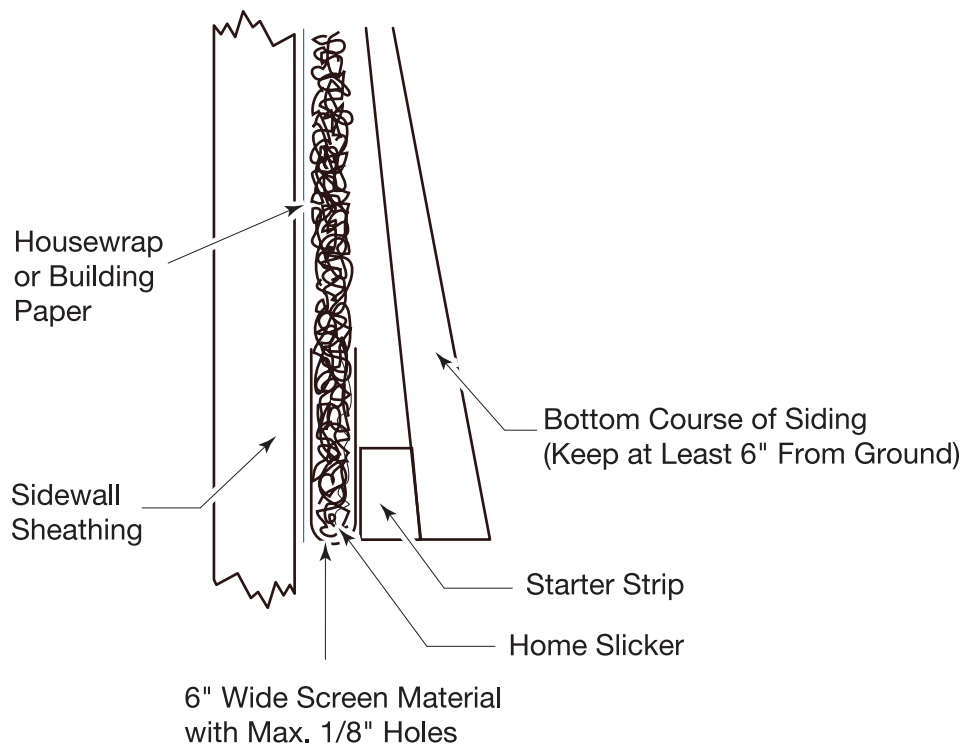

**BENJAMIN  
OBDYKE**

For additional information call:

**800-346-7655**